

Replacement of abrasion cap


Rev.: A



2) Clean the 2 screws and re-glue them using the LOCTITE 248 stick



3) Install the new recessed abrasion cap

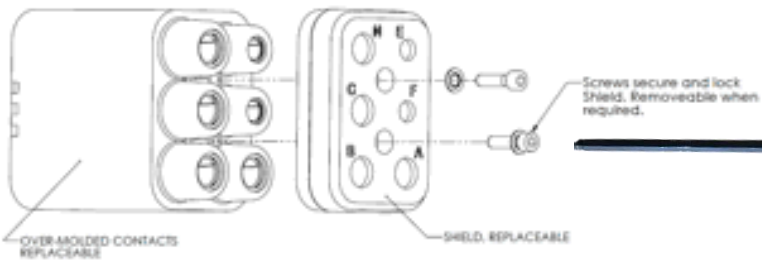

1) Remove the old abrasion cap by loosening the 2 hex key screws

