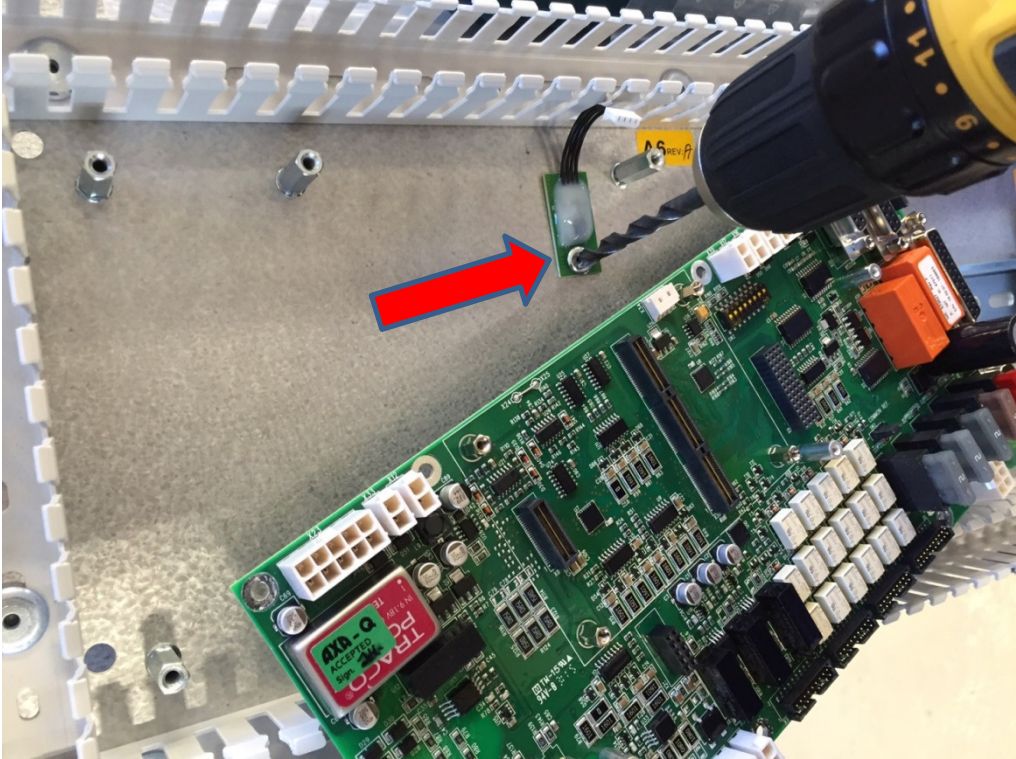


Replacement of ID chip 2400 series – retrofit feature

1	Turn off the power to the GPU and make sure nobody can turn it on.
2	<p>You need to mount a new ID chip to upgrade the GPU with a feature that was not programmed during the built at the factory (retrofit feature). Loosen the interface board to get access to the chip. Drill out the rivet using a drilling machine, see picture.</p> 
3	Mount the new ID Chip with the rivet (delivered with the ID chip) Make sure to mount the ID chip with the same S/N as mentioned on the rating plate of the specific unit. Re-mount the interface board.
4	Power up the GPU and check that everything is working as it should.